



PRIORITY #1 - QUALITY & CUSTOMER SATISFACTION

CARD & TICKET DISPENSERS • CARD & BOX VENDING MACHINES
VENDING CONTROLLER BOARDS • CREDIT CARD PAYMENT TERMINALS

phone: [1] 352-678-3021 fax: [1] 775-256-6311 technical: [1] 352-796-4001
16381 Cherokee Road • Brooksville • Florida 34601

XCP CORP MANUFACTURED VENDAVOLT CASHLESS PAYMENT ELECTRICITY TIMER PAYMENT STATION INSTALLATION INSTRUCTION MANUAL



1 Introduction

The VendaVolt Electricity Timer Cashless Payment Station is designed for the North American market to vend electricity by timer cycle. This document provides instructions for the VendaVolt Cashless Payment Electricity Timer Payment Station and is not for use for any other product. Before installation or use of this product, you should review this manual carefully and consult with a licensed electrical services contractor, licensed electrician, or trained installation expert to ensure compliance with building codes and safety standards. The VendaVolt Nayax Vpos Touch & Clear Token models may differ slightly in cashless operation and registration.



1.1 Applications

Motel & Hotel Laundry Rooms
Car Washes
Condominiums Laundry Rooms
Bulk Water & Feed Dispensing
Electric Vehicle Level 1 & 2 Chargers
Golf Cart Chargers
Golf Ball Driving Stations
Gun Range & Golf Driving Range Gas Heaters

Please read and follow these safety warnings and operating instructions carefully before operating VendaVolt 110~120V or 220~240V Cashless Payment Electric Vehicle Charging Station. Failure to follow these instructions may result in serious injury or property damage.

2 Important Safety Warnings and instructions

IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS. WARNING!

Disconnect electrical power before installing the VendaVolt Cashless Payment Electricity Timper Station. Failure to disconnect electrical power may cause physical injury to the installer or damage to the electrical system and host connected device.

Read all the instructions before using this product.
Children should be supervised when this product is used around children.
Do not put fingers into the open VendaVolt enclosures and connectors.
Do not use this product if the flexible power cord or product cords or cables are frayed, have broken insulation, or display any other signs of damage.
Do not use this product if the electrical machine to be connected is broken, cracked, open, or show any other signs of damage.


CAUTION

To reduce the risk of fire in cord-connected units, connect only to a circuit for each VendaVolt Electricity Cashless Payment Station provided with maximum branch circuit over current protection as shown below in accordance with the National Electrical Code, ANSI/NFPA 70 . Install wiring gauge diameter of no less than #14 gauge for washers & #10 gauge for 220V dryers.

The VendaVolt Cashless Payment Timer Station should be installed only by a person with electrical expertise, a licensed contractor, and/or a licensed electrician in accordance with all applicable state, local and national electrical codes, and standards.


Step #1

Open the top lid of the VendaVolt unit by using the security tool provided with each shipment of VendaVolt units to remove the 4 M4 security screws and tip the lid to one side of the VendaVolt unit to expose the internal components.

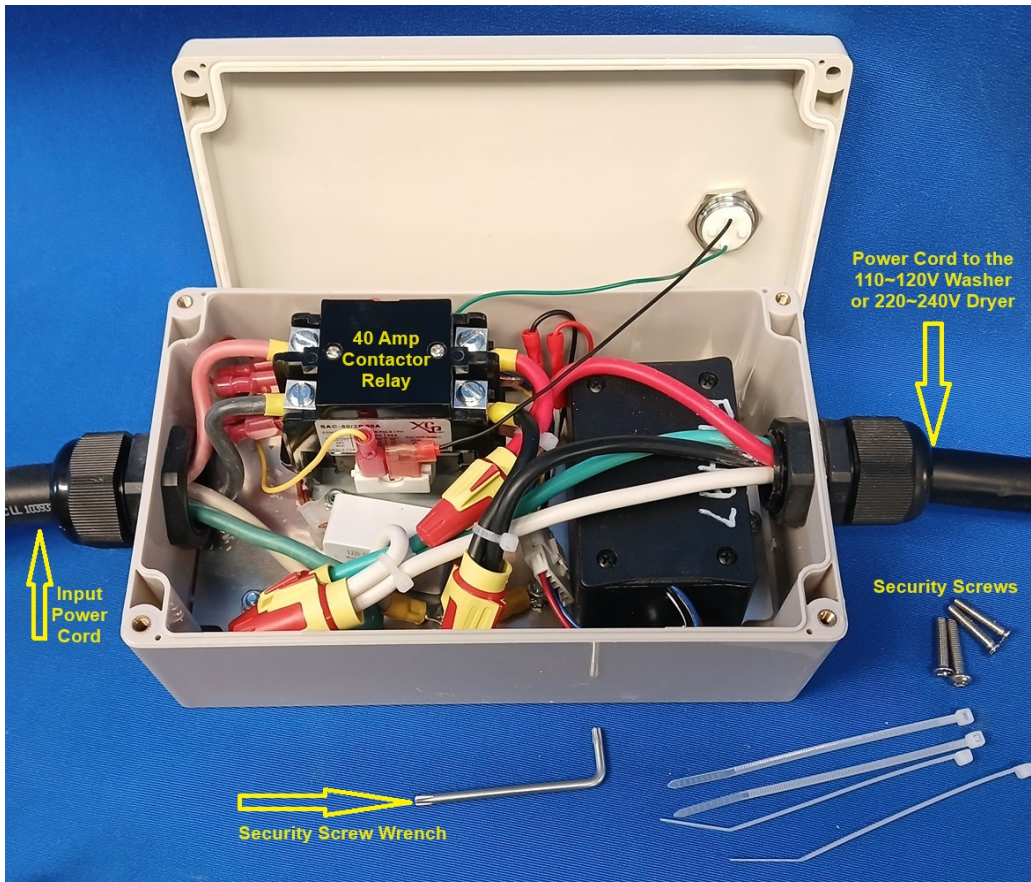

Step #2:


Cut off the washer or dryer power cord plug. Strip back six inches of the black outer cord cover from the cut off end exposing the internal 110~120V for washers or 220~240V for dryers. Push the wires through the black cord connector located on the opposite end of the contactor relay. Example below is for the dryer with 4 wires.

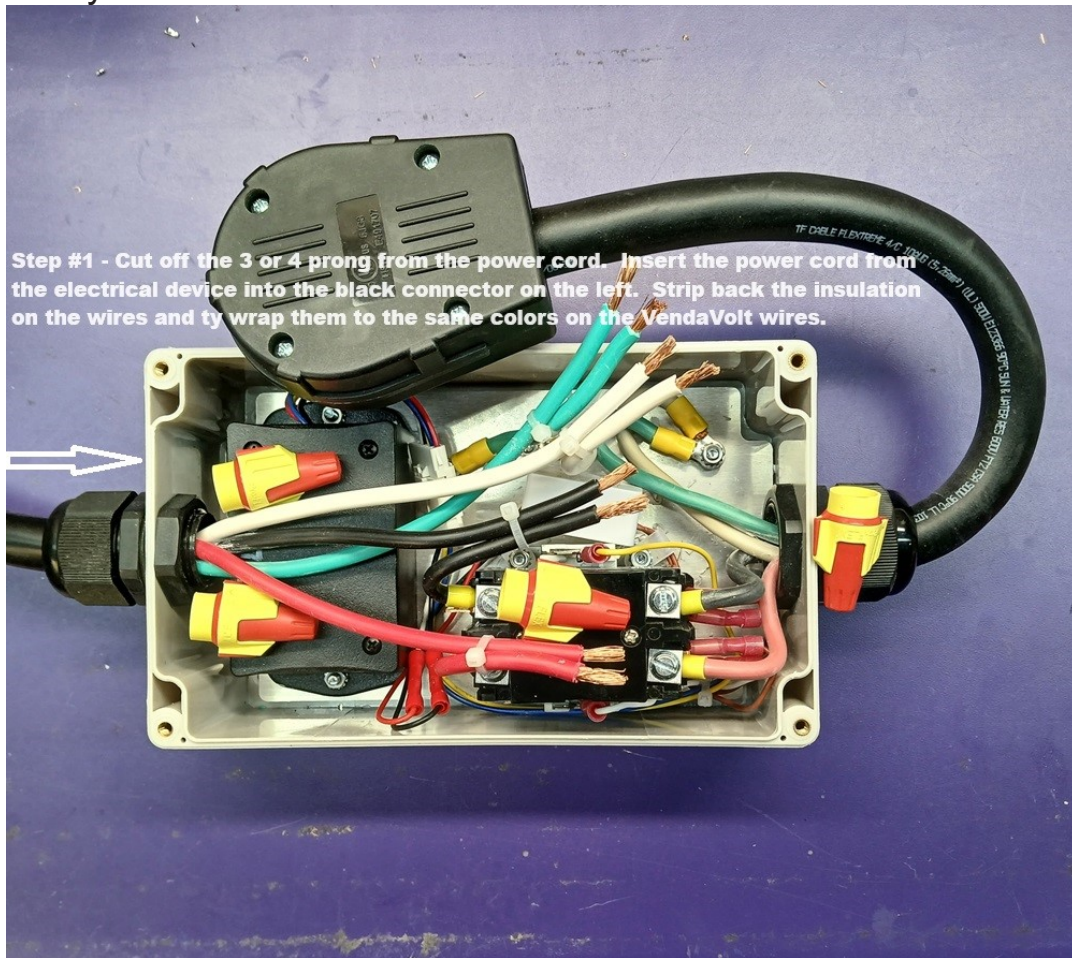

Remove $\frac{1}{2}$ inch of the outer insulation on the ends of the washer or dryer power cord. Use the supplied wire nuts to match color to color wires and screw the wire nuts securely to the 2 wires as shown in the photo above. Washer wires will be black **“hot”**, white common and green ground. The dryer may have 3 wires or 4 wires from the dryer. The black and red are the **“hot”** 220~240V, the green and white is ground. On older dryers there will be three (3) wires. Black & white are **“hot”** and the green is ground. Install the wire ty wraps to secure the 2 wires together below the wire nut as shown in the photo above:


Step #3:

Tighten the 3 or 4 wire nuts of the washer or dryer cord that are connected to the wires inside of the VendaVolt enclosure. Check that the black outer nut on the connector for the cord exiting that leads to the washer or dryers to be tight. The assembled VendaVolt ready to be closed should look like the following dryer 220V photo:

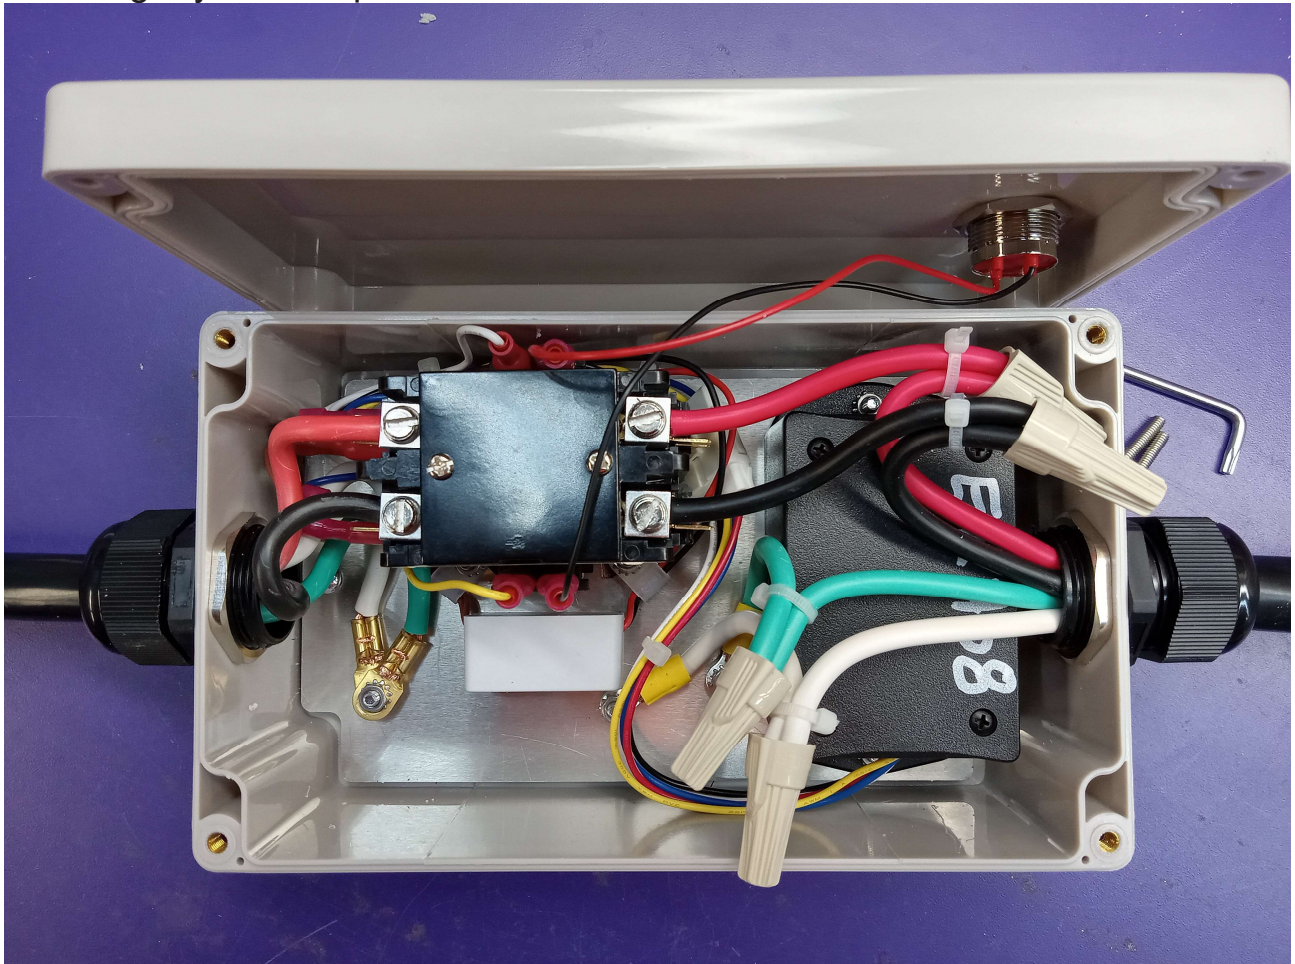

Step #4:

Included for the washers are 4 screws & 4 wall anchors to secure the plastic enclosure to the wall. There are 4 openings in each corner of the enclosure to insert the 4 screws to attach the plastic VandaVolt unit securely to the wall below the 110~120V wall outlet. It is not necessary for 220~240V dryers.

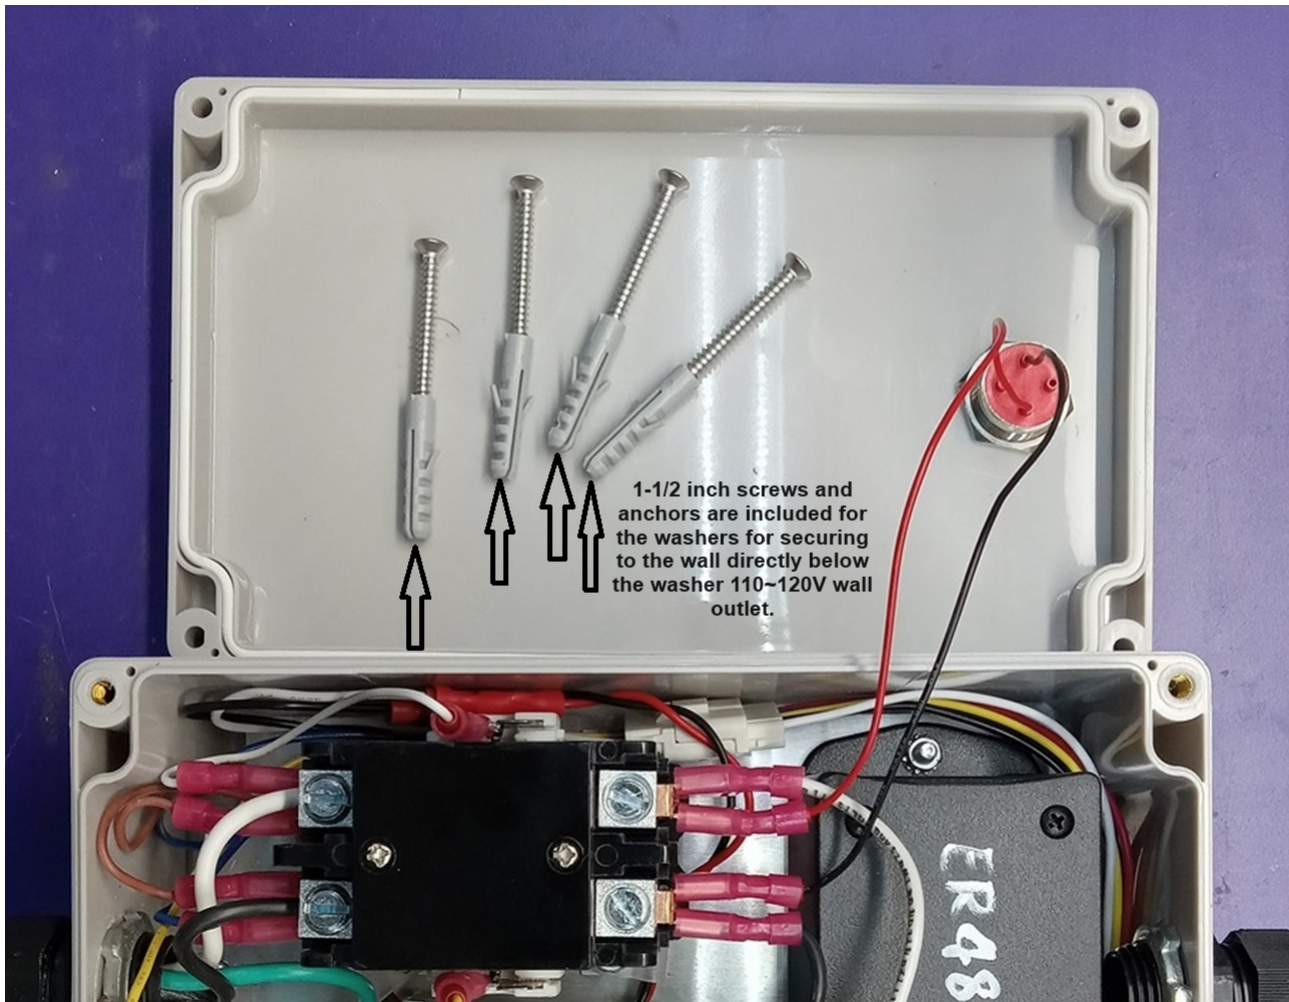

Step #5:

Place the cover back on the top and secure with the four (4) security screws. Install the numbered decals on the front of the washer or dryer to match each VendaVolt unit. Customers will look for that number amongst other numbers to select which washer or dryer that they will make payment from their cell phone Clear Token App. Plug the VendaVolt unit power cord into the wall outlet. The VendaVolt is ready to be vended from the Clear Token App.



Step #6:

Check with Clear Token to confirm that the serial numbers of the VendaVolt stations are registered and ready to accept payments. Below on the next page is the form required to be filled out and submitted to Clear Token.

Plug in the male power cord plug of the VendaVolt and test by making payment with the Clear Token Cellular Phone Visa & MasterCard App. Contact XCP Corp for any assistance in the installation above. [1] 352-678-3021. Sales@xcpcorp.com

**Clear Token Customer Setup
2149 S. Grape Street
Denver, CO 80222
(720) 373-7000**

Please Return This Information Register Form to; stan@cleartoken.com

Payment by Check

Check Sent to Name:

Check Sent to Address:

Check To: City, State &
Zip:

Payment by ACH

ACH Bank Name:

ACH Bank Routing
Number:

ACH Bank Account
Number:

**Location
Information**

Devices:

Washers:
Dryers:

Monthly Administrative Fee Is \$5.00 Per Device

IMPORTANT! Contact Stan Wolfson at (720) 373-7000 prior to attempting to install or operate the Clear Token Payment Systems. Default Settings are: \$3.00 for 70 minutes standard load, \$3.50 for 90 minutes heavy load, \$4.00 for 120 minutes extra settings & \$5.00 for 180 minutes.