



PRIORITY #1 - QUALITY & CUSTOMER SATISFACTION

CARD & TICKET DISPENSERS • CARD & BOX VENDING MACHINES  
VENDING CONTROLLER BOARDS • CREDIT CARD PAYMENT TERMINALS

phone: [1] 352-678-3021 fax: [1] 775-256-6311 technical: [1] 352-796-4001  
16381 Cherokee Road • Brooksville • Florida 34601

# INSTALLATION GUIDE FOR THE VENDAVOLT CASHLESS PAYMENT KIT FOR RETROFIT OF COIN SLIDE PAYMENT STYLE WASHERS & DRYERS



# Introduction: Cashless Timer Payment Station

The VendaVolt Cashless Timer Payment Station is designed for vending a momentary pulse (switch closure) to start a washer or dryer. This document provides instructions on assembly and use and not for any other device, product or use. It should be electrically wired by the electrician for service for each washer or dryer. Before installation or use of this product, you should review this instruction manual carefully and consult with a licensed contractor electrician, or trained installation expert to ensure compliance with building codes and all safety standards.

This installation instruction guide is for use with the “Clear Token” Visa & MasterCard Blue Tooth Cellular Phone App Module. The cell phone app has 1 prepaid price or configured for multiple pulses.

## 1 Applications

Condominium Laundry Rooms

Motel & Hotel Laundry Rooms

RV Park Laundry Rooms

Commercial Self-Service Laundry

Please read and follow these safety warnings and operating instructions carefully before operating VendaVolt Payment Station. Failure to follow these instructions may result in serious injury or property damage.

## 2 Important Safety Warnings and instructions

**WARNING! IMPORTANT SAFETY INSTRUCTIONS. SAVE THESE INSTRUCTIONS.**

Disconnect electrical power before installing the VendaVolt Cashless Timer Payment Station. Failure to do so may cause physical injury or damage to the electrical system and charging unit .

Read all the instructions before using this product. Children should be supervised when this product is used around children. Do not put fingers into any open electrical connections. Do not use this product if the power cord or electrical wires are frayed, have broken insulation, or display any other signs of damage. Do not use this product if the enclosure or the electrical connection is broken, cracked, open, or show any other signs of damage.

## 3 CAUTION

The VendaVolt Cashless Payment Station Kit should be installed only by a licensed contractor, and/or a licensed electrician in accordance with all applicable state, local and national electrical codes and standards.

Before installing the VendaVolt Cashless Timer Payment Station, review these instructions carefully and consult with a licensed contractor, licensed electrician, and trained installation expert to ensure compliance with local building practices, climate conditions, standards, and state and local codes. Use appropriate protection when connecting to the main power distribution cable.

Step #1 – Open the door for access to the coin slide payment mechanism.

Step #2 – Locate the coin slide activated microswitch that has 2 wires attached to it. This is the switch that makes contact when the coin slide mechanism is pushed inward to start the washer or dryer.

Step #3 – Splice with the red splice connectors to the yellow wire and blue wire on each of the wires leading to the microswitch. Usually, the coin microswitch will have a red and white wires connected to switch. The complete VendaVolt kit may have extension wires added to the yellow and blue wires.

Step #4 – Connect the black and white wires to the dryer or washer 110~120 volt or the 220~240 volt AC located in back of the washer/dryer control panel. Use the red splice connectors to connect to the hot “black” wires and the common “white” wires of the incoming AC power.

## 4 READY FOR OPERATION

Flip the installed 30 amp dryer circuit breakers or for the 15 amp washer circuit breakers to the “**on**” position after the installation is completed.

# 6 CLEAR TOKEN REGISTRATION INSTRUCTIONS:

Clear Token Customer Setup  
2149 S. Grape Street  
Denver, CO 80222  
**(720) 373-7000**

## Important

Please Return This Information Register Form to;  
stan@cleartoken.com

### Payment by Check?

Check Sent to Name:

Check Sent to Address:

Check To: City, State & Zip:

### Or Payment by ACH?

ACH Bank Name:

ACH Bank Routing Number:

ACH Bank Account Number:

### Location Information

Device Serial Number

### Monthly Administrative Fee Of \$5.00 Per Device

### Specify the vend price for the momentary pulse (switch closure)

A person with only an international number must call the Clear Token office (720) 373-7000, Clear Token will give the person a "fake" US number that will be used in the Clear Token App. Clear Token will give the verification code required to activate the "fake" number. Clear Token will give the verification code over the phone because the "fake" number can't receive the verification text. The entire process takes less than 3 minutes. The person can fund the account and operate the app exactly like a US customer.