



PRIORITY #1 - QUALITY & CUSTOMER SATISFACTION

CARD & TICKET DISPENSERS • CARD & BOX VENDING MACHINES
VENDING CONTROLLER BOARDS • CREDIT CARD PAYMENT TERMINALS

phone: [1] 352-678-3021 fax: [1] 775-256-6311 technical: [1] 352-796-4001
16381 Cherokee Road • Brooksville • Florida 34601

Instruction Manual

XCP 5000 Series Card Dispenser Vending Controller

Original Publication Date: 18 September 2022

Revision – 05

E-mail : Sales@XCPCorp.com

Website: www.xcpcorp.com



UPDATES FROM REVISION 03 TO 04:

- **“PULSE for 5 CENTS” MENU ADDED.**
- **TWO NEW MESSAGE ADDED TO “OTHER MESSAGES” IN PAGE. NO:3.**

UPDATES FROM REVISION 04 TO 05:


- **PKB9499 keypad added with key function.**

LED Glow Conditions

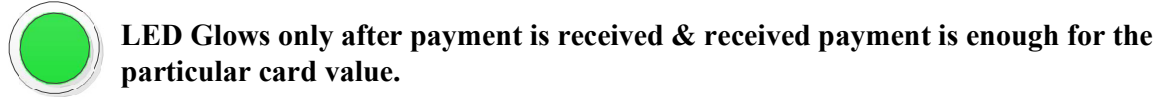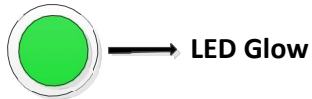


Various messages during dispense cycle:

INSERT PAYMENT
MAKE SELECTION

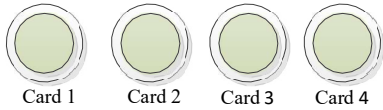


Ready Mode
Ready to dispense cards.

USD 001.00 [059]
MAKE SELECTION

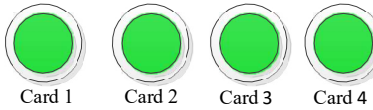


Insert your payment before
selection.

USD 001.00 [050]
MAKE SELECTION

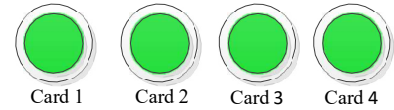


Select your card
within time shown in display.

Collect Card

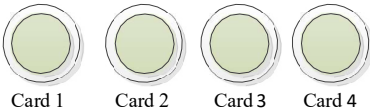


Dispensing your card....

Remove The Card
Thank you

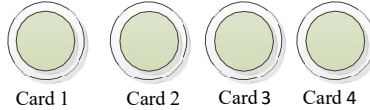

Dispense completed.

Balance credit
\$000.92

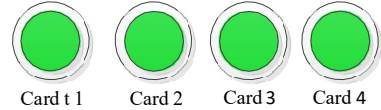

Balance credit used for next
dispense. Available up to
timeout.

Insufficient
credit



Price of 1,3,4 are less than amount
inserted. Card 2 price is more than
amount inserted. If you select card 2
above information will be displayed.

Other Messages:

Please Select
One Card

If you select more than one button,
display shows this message.

All Cards
Sold Out

Self-explanatory.

Sel. Another Card
Sel. Sold Out

If you select unavailableCard.

Enable Card
Dispenser

If all 4 dispensers are in disabled
Condition then this message is
displayed.

Sel. Another Card
Enable Card Dis.

If selected card is disabled, then
this message is displayed.

USD 001.00 [059]
ALL Card Sold

If all 4 dispensers are in
disabled and Entered Credit
then this message is
displayed.

USD 001.00 [059]
Enable Dispenser

Self-explanatory and
Entered Credit then this
message is displayed.

Menu List

Dispenser Price set

Dispenser 1 Price, Dispenser 2 Price, Dispenser 3 Price, Dispenser 4 Price

Machine Status

Total Sales

Dispenser Count

Dispenser 1 Count, Dispenser 2 Count, Dispenser 3 Count,
Dispenser 4 Count, Dispenser Credit.

Dispenser 1 Credit, Dispenser 2 Credit, Dispenser 3 Credit,
Dispenser 4 Credit, Clear Count & Credit,

Machine Config

Set Password

Dispense Timeout

Currency Code

Card Dispenser Y/N

Dispenser 1

Dispenser 2

Dispenser 3

Dispenser 4

PULSE for 5 CENTS

TO MAIN BOARD(PCD6915) CN1

CN1 7 6 5 4 3 2 1
7W 2515 HEADER 90DEG


ACCEPT

DECREMENT


INCREMENT

MENU/ESC


Programmer Keypad Card Price Setting:

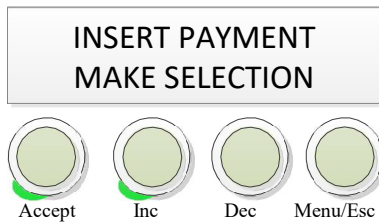

Press Menu key up to 5seconds.

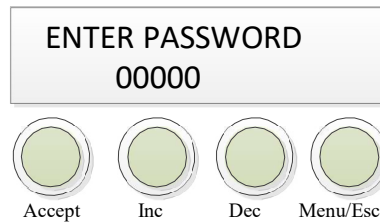


Enter your password using 'Inc/Dec' keys. Then press 'Accept' key to enter the menu.

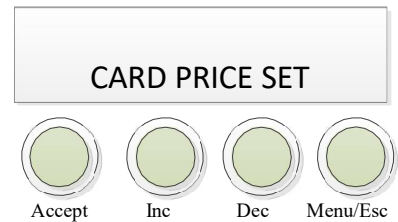


Press 'Accept' key.

 CARD PRICE SET
CARD 1 PRICE




Press 'Accept' to enter menu.

CARD 1 PRICE
00100

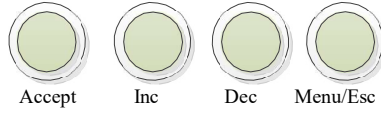


Set price in cents using
'Inc/Dec' key.

CARD 1 PRICE
Setting Stored

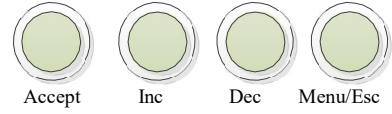


Then press 'Accept' key to
store the values.

CARD PRICE SET
CARD 1 PRICE

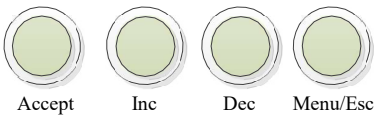

Press 'Inc' key to set next
Product price.

CARD PRICE SET
CARD 2 PRICE

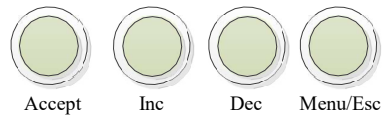


Set price for Product 2.

Note: Similarly for all products.

Machine Status:


Total Sales:

CARD PRICE SET

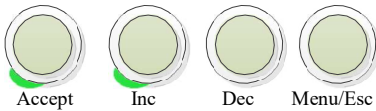


Press 'Inc' key to go machine
status.

MACHINE STATUS

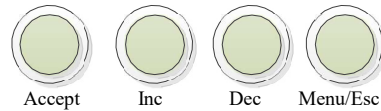


Press 'Accept' key.

MACHINE STATUS
TOTAL SALES

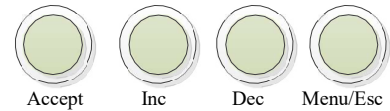

Press 'Accept' key to view
total sales.

Res crd : 0001542
Cum crd: 0009392

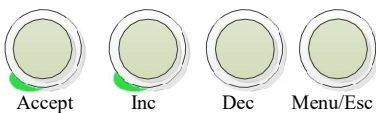

Press 'Escape' key to exit.


Note:

Res crd – Resettable credit.

Cum crd – Cumulative credit.


Card Count:

MACHINE STATUS
TOTAL SALES

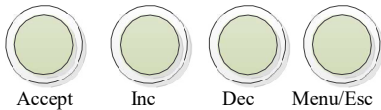


Press 'Inc' key for card count.

MACHINE STATUS
CARD COUNT

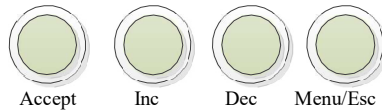


Press 'Accept' key to enter card count.

CARD COUNT
CARD 1 CNT

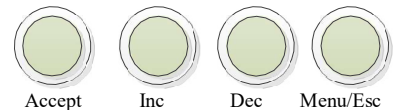


Press 'Accept' key to view card count.

Res cnt : 001022
Cum cnt: 009392

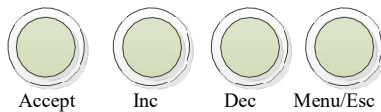


Press 'Escape' key to exit.

CARD COUNT
CARD 1 CNT

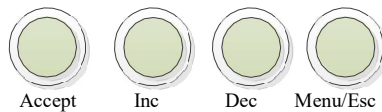

Press 'Inc' key to next card count.

CARD COUNT
CARD 2 CNT

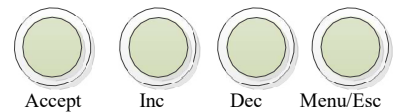


Press 'Accept' key to view card count.

Note: Similarly for all cards.
Res cnt – Resettable count.
Cum cnt – Cumulative count.


Card Credit:

MACHINE STATUS
CARD COUNT

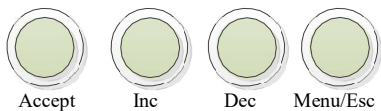


Press 'Inc' key for Card credit.

MACHINE STATUS
CARD CREDIT

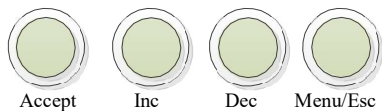


Press 'Accept' key to Card credit.

CARD CREDIT
CARD 1 CRD

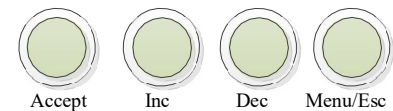


Press 'Accept' key to view Card credit.

Res crd : 0000161
Cum crd: 0002221

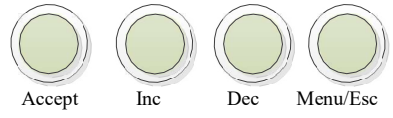


Press 'Escape' key to exit.

CARD CREDIT
CARD 1 CRD

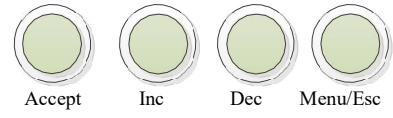

Press 'Inc' key to next card credit.

CARD CREDIT
CARD 2 CRD

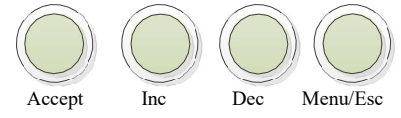


Press 'Accept' key to view next Card credit..

Note: Similarly for all cards.
Res crd – Resettable credit.
Cum crd – Cumulative credit.


Clear Resettable Count & Credit:

MACHINE STATUS
CARD COUNT

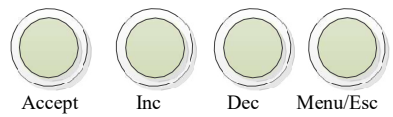


Press 'Inc' key for Clear Resettable count & credit.

MACHINE STATUS
CLR CNT & CRD

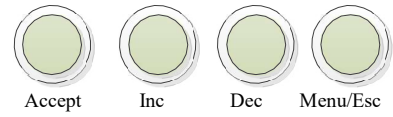


Press 'Accept' key to enter Clear Resettable count & credit.

CLR CNT & CRD
Yes

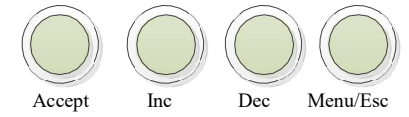


CLR CNT & CRD Yes/No using 'Inc, Dec' keys. Then press 'Accept'. If yes Resettable count & Credit values are reset. Pressing 'Esc' key allows you to go back without resetting the Credit & Count.

CLR CNT & CRD
Settings stored

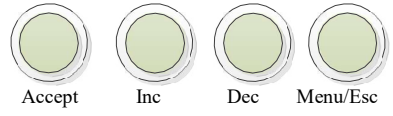


Press 'Accept' key for Clear count & credit.

CLR CNT & CRD
No

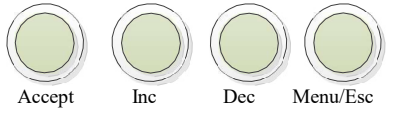


Press 'Escape' key to Exit.


Set Password:

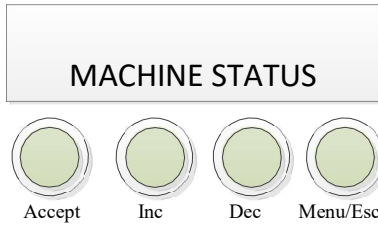


Press 'Inc' key to Machine config

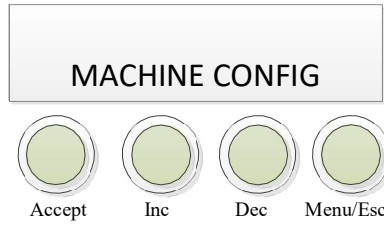


Press 'Accept' key to enter menu.

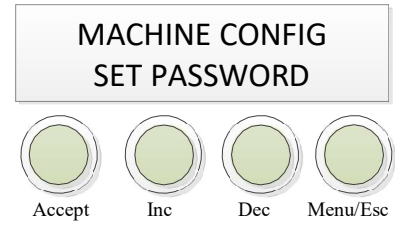


Press 'Accept' key.

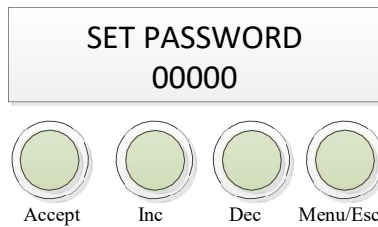

Set your password using 'Inc/Dec' keys.

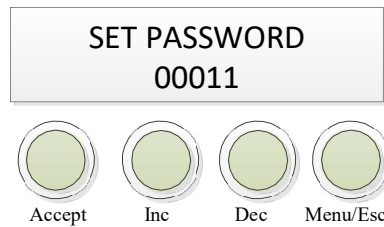


Press 'Accept' key to store the password.

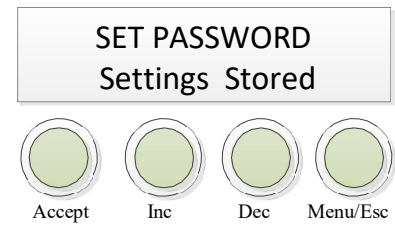


Now new password has been Updated, then press exit.


Dispense timeout:

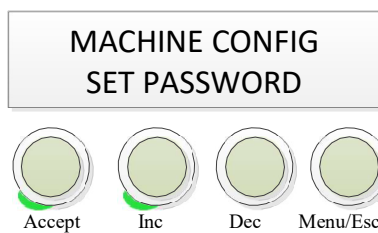


Press 'Inc' key to Dispense timeout.

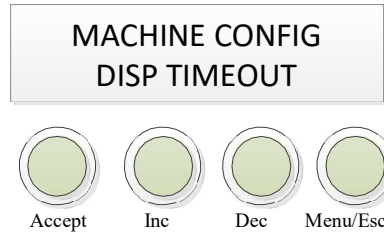

Press 'Accept' key to enter menu.

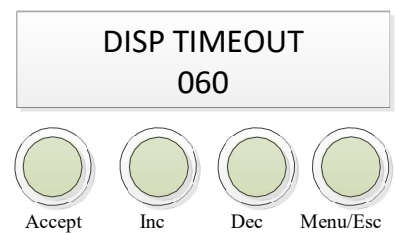

Set Display timeout values in Sec using 'Inc/Dec' keys.

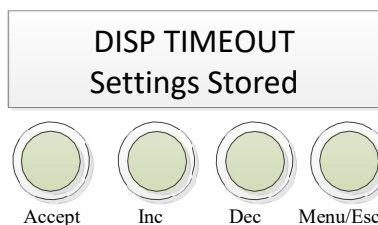


Press 'Accept' key to store the value. Then press exit.

Note: This timeout is the time allowed for selection. If user doesn't select within this time, the credit will lapse. Dispense timeout will restart after each credit insertion/card selection.


Currency code

MACHINE CONFIG
DISP TIMEOUT

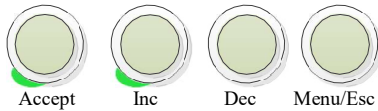


Press 'Inc' key to Currency code.

MACHINE CONFIG
CURRENCY CODE

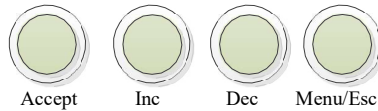


Press 'Accept' key to enter menu.

CURRENCY CODE
_INR

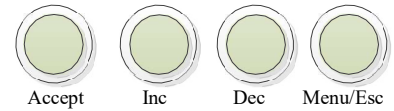


Set your Currency code using 'Inc/Dec' keys.

CURRENCY CODE
UND

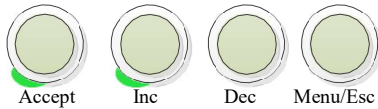


Press 'Accept' key to move cursor for next letter. Then press 'Inc/Dec' keys to select letter.

CURRENCY CODE
USD

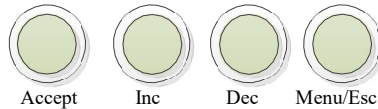

Then press 'Accept' key to move cursor for next letter.

CURRENCY CODE
Settings Stored

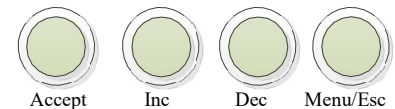


Press 'Accept' key to store the currency code. Then press 'Esc' key to exit.

Note: Currency code settable character - \$, €, space, A to Z, a to z.

Press 'Inc/Dec' key to change \$, €, space, A to Z, a to z for all letters.


Dispenser Y/N:

MACHINE CONFIG

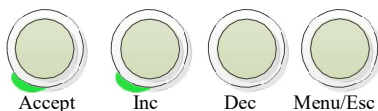


Press 'Inc' key to

CARD DISP. Y/N

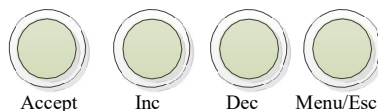

Dispenser Y/N Menu.




CARD DISP. Y/N
Dispenser 1

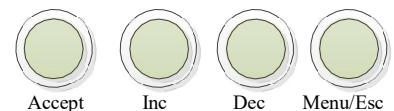

Press 'Accept' key to enter

Dispenser Y/N Menu.




Press 'Accept' key to enter Dispenser 1 Selection.

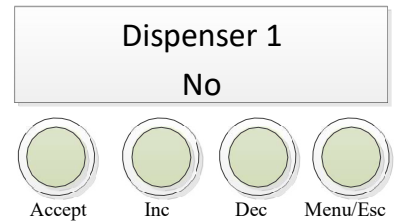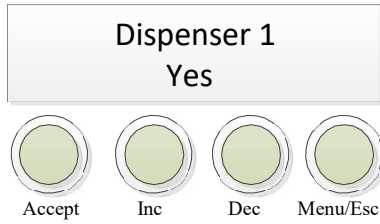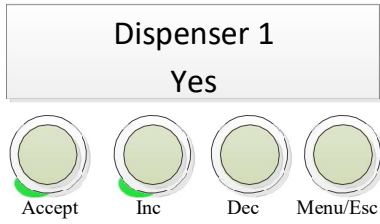

This shows dispenser 1 is in the enabled state, Then if you want leave it Press 'Escape' key.

If current position is 'Yes', Then, if you want to change it Press 'Dec' key.


Press 'Accept' to store Setting.

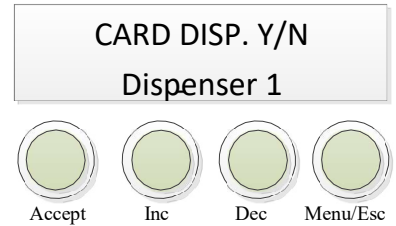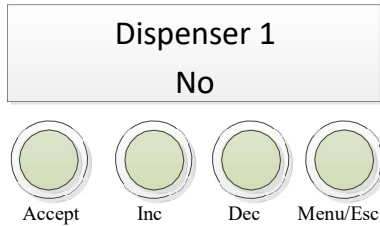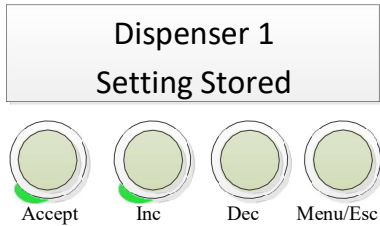

Then Press 'Accept' key to Enable/Disable the Card Dispenser.

Press 'Escape' key to Exit.




Press 'Inc' key to set next Dispenser.

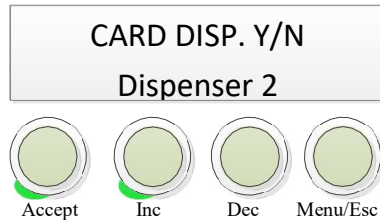


Enable/Disable for Dispenser 2.


Note: Similarly for all Dispensers.

    PULSE FOR 5 CENTS:







 
Press 'Inc' key to PULSE for 5 CENTS Menu.




 
Press 'Accept' key to enter PULSE for 5 CENTS Menu.



 
 
Press 'Accept' key to enter PULSE for 5 CENTS Selection.



 
 
This shows 1 PULSE for 5CENT, If you want leave it Press 'Escape' key.



  If you want to change PULSE setting Press 'Inc' key.



Press 'Accept' to store Setting.

  

Now new value has been updated.
Press 'Escape' key to exit.

Note:

PULSE for 5 CENTS is 1

- 5 CENTS = 1 PULSE
- 10 CENTS = 2 PULSES
- 25 CENTS = 5 PULSES
- 50 CENTS = 10 PULSES
- 1 DOLLER = 20 PULSES likewise

PULSE for 5 CENTS is 2

- 1 CENTS = 1 PULSE
- 5 CENTS = 2 PULSES
- 10 CENTS = 4 PULSES
- 25 CENTS = 5 PULSES
- 50 CENTS = 8 PULSES
- 1 DOLLER = 10 PULSES

Note: Exit from Menu, press 'Escape' key (or) After 30 seconds it will automatically exit from the menu.

Default Settings

Card Price for each Card value - 100
Cent Dispense Time Out - 60 Secs
Password - 00000
Recovery Password – 14288
Card Dispenser Status 'Yes' for all 4 Card Values.
Pulse for 5cent – 1.